


EXTERNAL DIMENSION

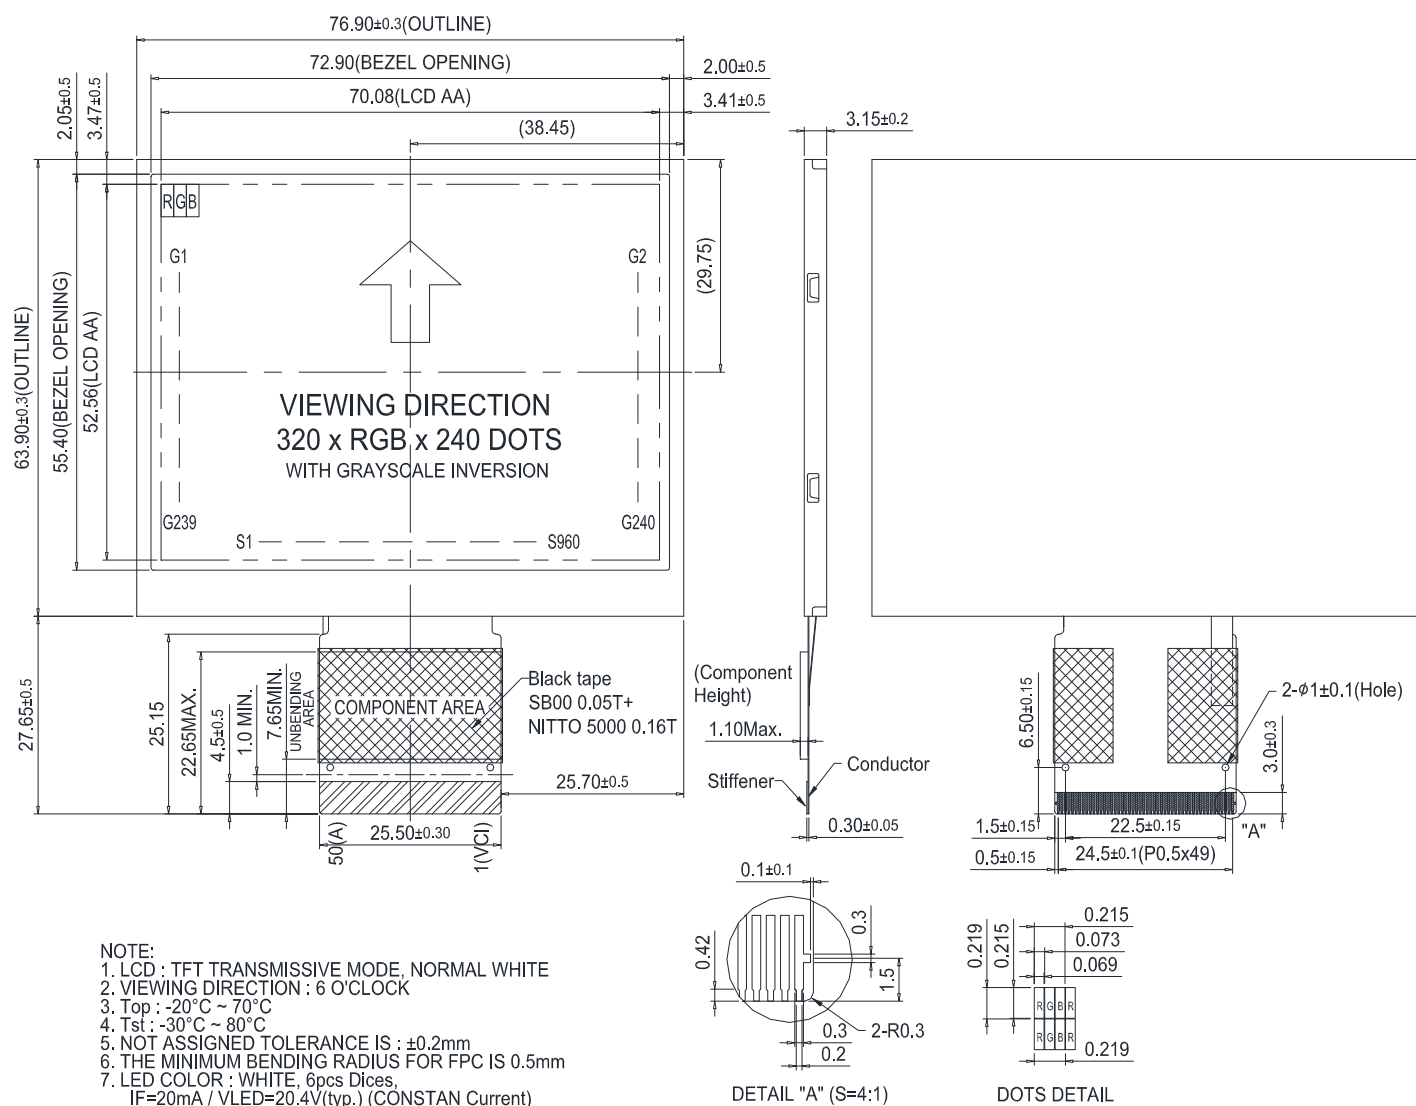

PIN CONNECTIONS

PIN NO	1	2	3	4	5	6	7	8	9	10
SYMBOL	VCI	VCI	VSS	VDDIO	VSS	RESB	DC/SDC	E/RD	RW/WR	CS/SCS
PIN NO	11	12	13	14	15	16	17	18	19	20
SYMBOL	SCL	SD0	SDI	WSYNC	D17	D16	D15	D14	D13	D12
PIN NO	21	22	23	24	25	26	27	28	29	30
SYMBOL	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2
PIN NO	31	32	33	34	35	36	37	38	39	40
SYMBOL	D1	D0	VSS	DOTCLK	HSYNC	VSNC	OE	VSS	PS0	PS1
PIN NO	41	42	43	44	45	46	47	48	49	50
SYMBOL	PS2	PS3	VSS	NC	NC	NC	NC	GND	K	A